Artisan® 710 Series
Start Here

1 Unpack

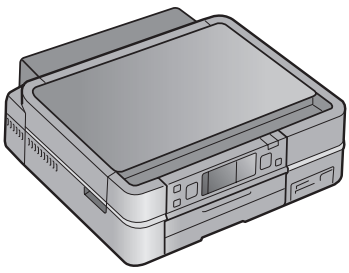

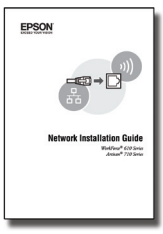

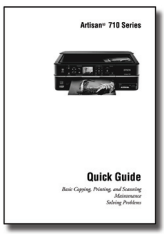

(Included for Canada only)



Power cord

If anything is missing, contact Epson as described on the back.

Caution: Do not open ink cartridge packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Canada only: For French speakers, remove sticker(s) from the backing sheet and place over the corresponding text on the control panel.

Remove all protective materials including from inside the paper cassette.

1 Lift the scanner and remove the transportation lock.

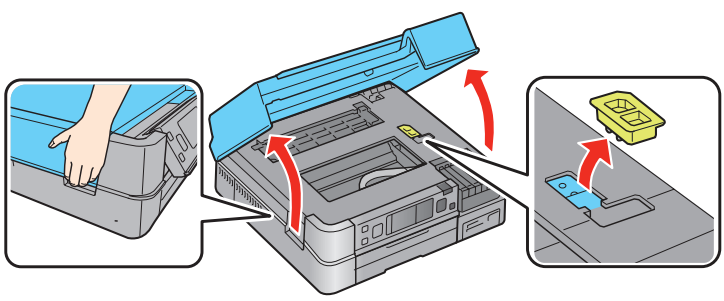

2 Store the transportation lock as shown.

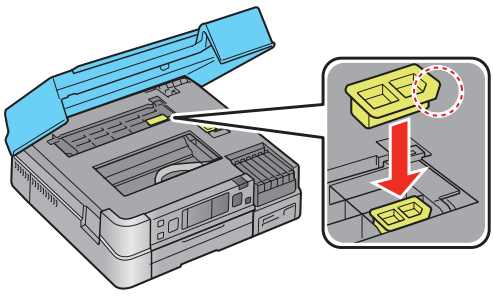

3 Close the scanner.

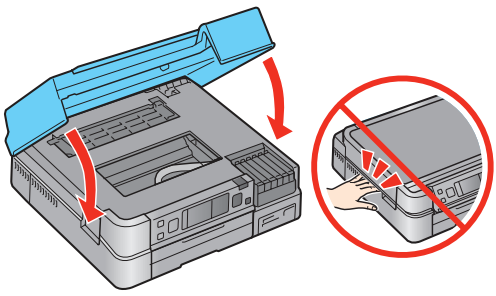

411702700

2 Turn on and adjust

1 Connect the power cable.

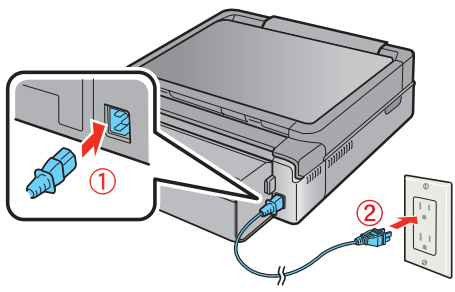

Caution: Do not connect to your computer yet.

2 Press the ⏻ **On** button, then raise the control panel.

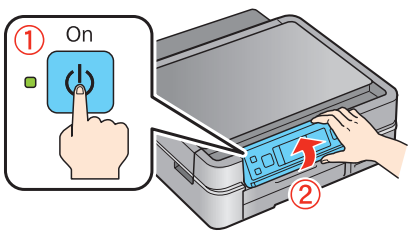

To lower the control panel, press the **Unlock** button.

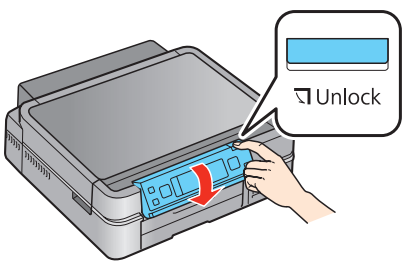

Caution: To avoid damaging your Artisan 710 Series, always press the **Unlock** button to lower the control panel.

Note: For more information on using and adjusting the control panel, see your *Quick Guide*.

3 Select language

Press ▲ or ▼ to select your **Language**, then press **OK**.

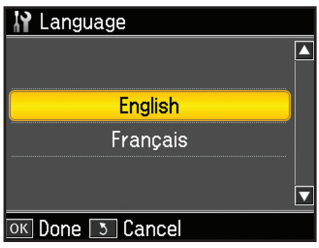

4 Install ink cartridges

Note: Do not load paper yet.

1 Lift up the scanner.

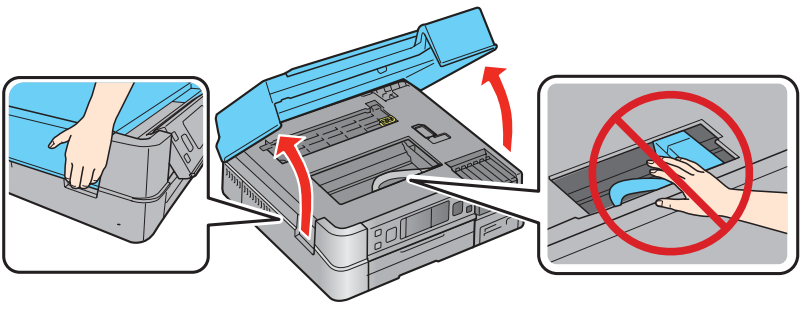

2 Unpack the ink cartridges.

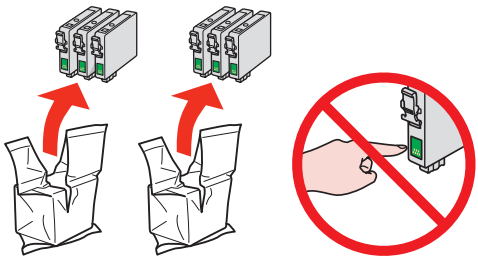

3 Remove only the yellow tape from each cartridge.

Caution: Don't remove any other seals or the cartridges may leak.

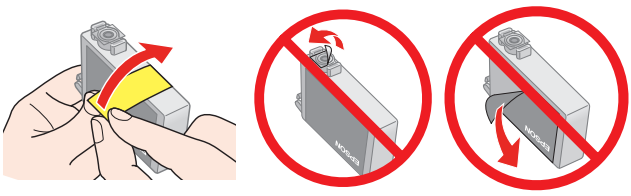

4 Insert the cartridges in the holder for each color. Press each cartridge down until it clicks.

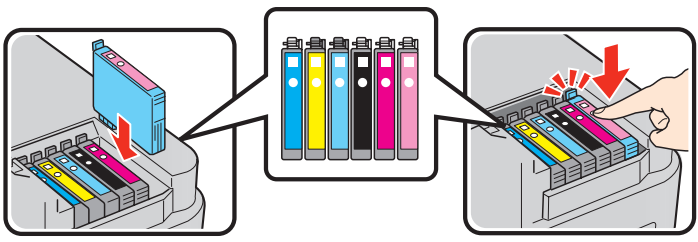

5 Lower the scanner.

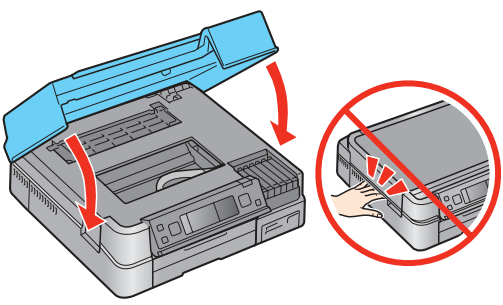

6 Wait while ink charges. Charging takes about 5 minutes.

Note: Your Artisan 710 Series ships with full cartridges and part of the ink from the first cartridges is used for priming the Artisan 710 Series. Replacement cartridges will print more pages.

Caution: Don't turn off the Artisan 710 Series while the ink system is charging or you'll waste ink.

5 Load paper

The paper cassette has 2 trays. The main tray is for letter-size, legal-size, or 8 x 10-inch paper. The photo tray is for 4 x 6- or 5 x 7-inch photo paper.

1 Pull out the paper cassette. Then slide back the photo tray and lift it up.

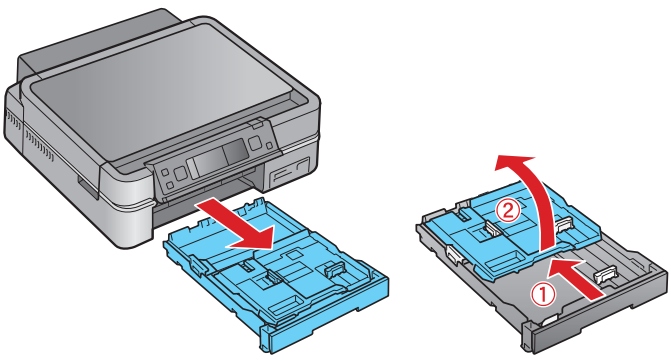

2 Squeeze the edge guides and slide them out. Then insert paper with the glossy or printable side face-down.

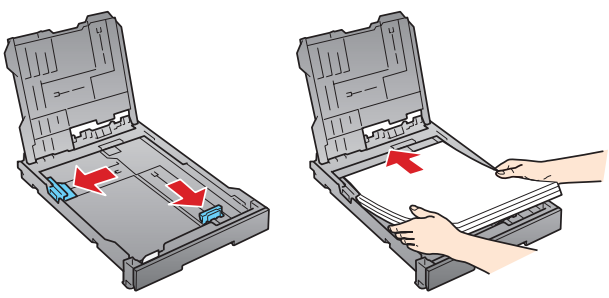

3 Slide the edge guides against the paper.

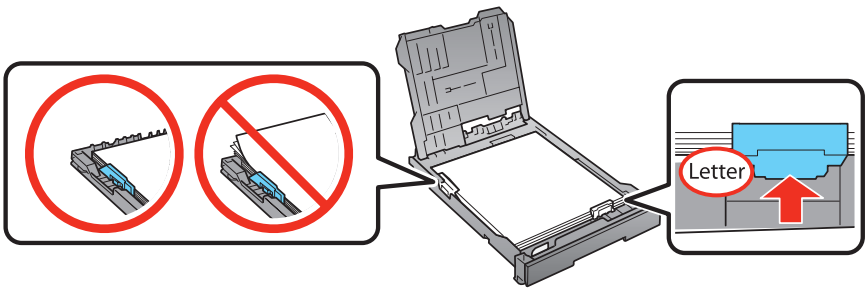

4 Lower the photo tray.

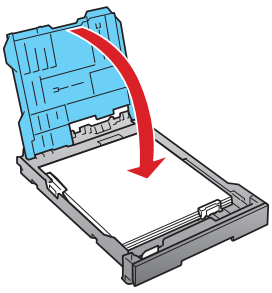

5 Squeeze the edge guides and slide them out. Then insert 4 x 6-inch or 5 x 7-inch photo paper with the glossy or printable side face-down.

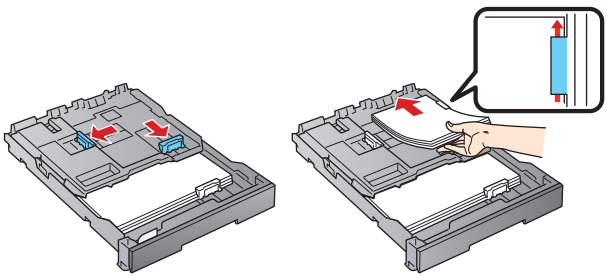

Note: Make sure the paper fits under the edge guide.

6 Slide the edge guides against the paper.

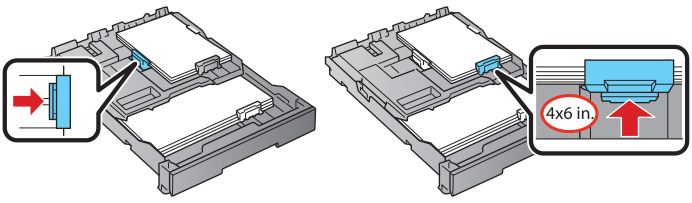

7 Keep the cassette flat as you insert it.

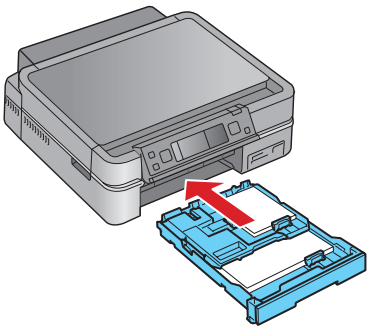

8 Extend the output tray and flip up the stopper.

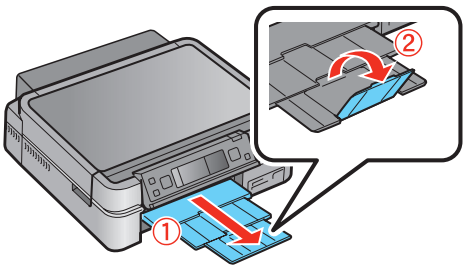

6 Choose your connection

Network (wireless or wired)

See your *Network Installation Guide*. You can't install your software as described below.

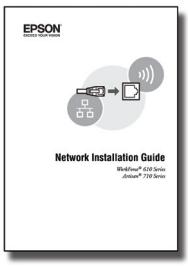

OR

USB connection

Make sure you have a USB cable (not included). Then follow the steps below.

USB connection

Follow these steps to connect the Artisan 710 Series directly to your computer using a USB cable (not included).

Windows®

1 Make sure the Artisan 710 Series is **NOT CONNECTED** to your computer.

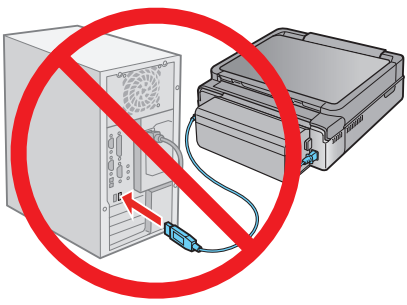

Note: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable. You can't install your software that way.

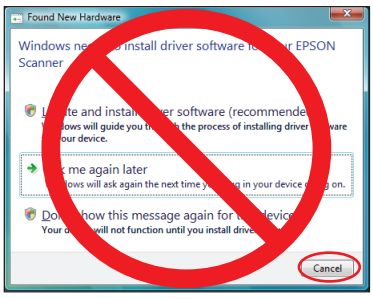

2 Insert the Artisan 710 Series software CD.

With Windows Vista®, if you see the AutoPlay window, click **Run Setup.exe**. When you see the User Account Control screen, click **Continue**.

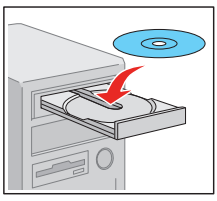

3 Click **Install** and follow the on-screen instructions.

Artisan 710 Series
Software Installation
This CD-ROM has all the software you need for your Artisan 710 Series. Click Install to get started.
Artisan 710 Series Drivers
Epson Print CD
Epson Information Center
Bonus Software
If you need to install individual items, click Custom.
EPSON
Custom
Install
Exit

4 When you see this screen, select **Install driver for direct USB connection** and then click **Next**.

5 When prompted, connect a USB cable. Use any open USB port on your computer.

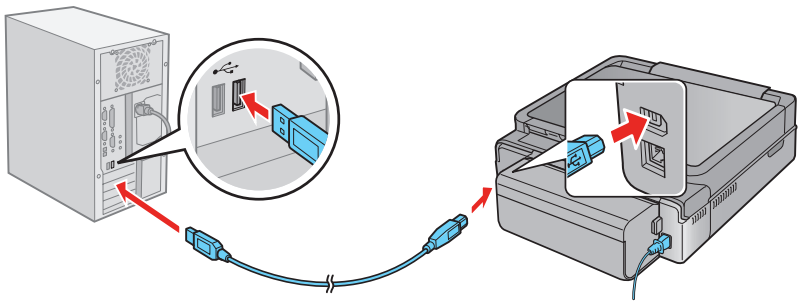

Note: If installation doesn't continue after a moment, make sure you securely connected the USB cable and turned on the Artisan 710 Series.

6 Follow the on-screen instructions to install the rest of the software and register your Artisan 710 Series.

Be sure to register your Artisan 710 Series to receive these great benefits: 2-year limited warranty and 2-year toll-free customer support.*

7 When you're done, eject the CD.

You're ready to go! Enjoy your Artisan 710 Series! See your *Quick Guide* or online *Epson Information Center*.

Macintosh®

1 Make sure the Artisan 710 Series is **NOT CONNECTED** to your computer.

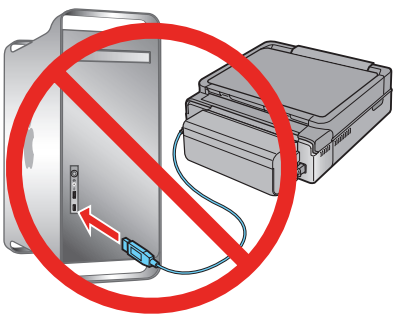

2 Insert the Artisan 710 Series software CD.

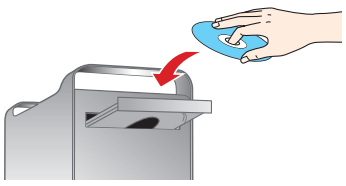

3 Double-click the **Epson** icon.

4 Click **Install** and follow the on-screen instructions.

Artisan 710 Series
Software Installation
This CD-ROM has all the software you need for your Artisan 710 Series. Click Install to get started.
Artisan 710 Series Drivers
Epson Print CD
Epson Information Center
Bonus Software
If you need to install individual items, click Custom.
EPSON
Custom
Install
Exit

5 When you see this screen, select **Install driver for direct USB connection** and then click **Next**.

6 When prompted, connect a USB cable. Use any open USB port on your computer. Make sure the Artisan 710 Series is securely connected and turned on.

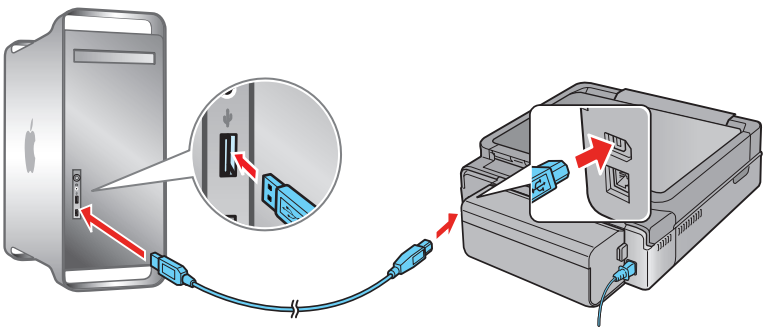

If you're using Mac OS X 10.5.x, skip to step 9.

If you're using Mac OS X 10.3.9 or 10.4.11, continue with the next step.

7 When you see this screen, click **Add Printer.**

Follow the steps on the right side of the screen to add the Artisan 710 Series.

Artisan 710 Series
Software Installation
Before you can print, you will need to add the all-in-one to the printer list.
Click Add Printer and then follow the on-screen instructions.
Add Printer
EPSON
Next
To add your Epson product, follow these steps:
1 Click Add in the screen to the left.
2 Follow the steps for your OS.
Mac OS X 10.4 users: Select your Epson product, then click Add.
Mac OS X 10.3 users: Select USB at the top of the screen. Then select your Epson product and click Add.
3 Quit the Printer Setup Utility.

8 Click **Next** again, if necessary.

9 Follow the on-screen instructions to install the rest of the software and register your Artisan 710 Series.

Be sure to register your Artisan 710 Series to receive these great benefits: 2-year limited warranty and 2-year toll-free customer support.*

10 When you're done, eject the CD.

You're ready to go! Enjoy your Artisan 710 Series! See your *Quick Guide* or on-screen *Epson Information Center*.

Any questions?

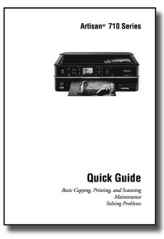

Quick Guide

Basic instructions for scanning, printing, copying, scanning, and using the control panel.

Online *Epson Information Center*

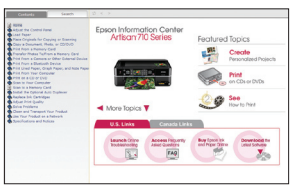

Click the desktop shortcut for easy access to the Artisan 710 Series user's guide, How-to videos, FAQs, online troubleshooting advice, and software downloads. You can also purchase paper and ink.

Note: You will need an Internet connection to view the *Epson Information Center*. If you can't find the desktop shortcut, you can also view the *Epson Information Center* at **epson.com/support**.

Network Installation Guide and Video

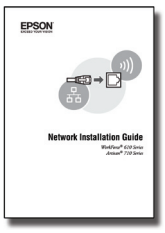

Instructions on configuring the Artisan 710 Series for a network. For a video tutorial and other information about setting up a wireless network, go to: **epson.com/support/wireless**

On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson Technical Support

Internet Support

Visit Epson's support website at **epson.com/support** and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Speak to a Support Representative

As a valued Artisan customer, we are providing you with an exclusive toll-free telephone number and PIN ID (Personal Identification Number) to use if you require assistance in setting up your product.

Telephone number: (866) 930-4288
PIN ID: 7082255

You may also speak with a support specialist by calling (562) 276-4382 (U.S.) or (905) 709-3839 (Canada), 6 AM to 6 PM, Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

Software Technical Support

ArcSoft Print Creations™
www.arcsoft.com/support

Need paper and ink?

Try Epson premium papers with Claria® ink for better than photo lab quality results. For the right supplies at the right time, you can purchase them at Epson Supplies Central℠ at **www.epson.com/ink3** (U.S. sales) or **www.epson.ca** (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Genuine Epson Paper

Epson offers a wide variety of papers to meet your needs; visit Epson Supplies Central for more information.

Ultra Premium Photo Paper Glossy
Instant-drying high gloss paper for long-lasting photos, suitable for framing.

Genuine Epson Inks

Look for the numbers below to find your cartridges. It's as easy as remembering your number!

Claria® Hi-Definition Ink

Color	Standard-capacity	High-capacity
Black	–	98
Cyan	99	98
Magenta	99	98
Yellow	99	98
Light Magenta	99	98
Light Cyan	99	98

* 1-year limited warranty to all purchasers; 2-year toll-free support and second year warranty require registration within 60 days of purchase. For California and Québec residents, failure to submit this product registration form does not diminish your warranty rights.

Epson is a registered trademark, Epson Exceed Your Vision is a registered logomark, and Supplies Central is a service mark of Seiko Epson Corporation. Artisan and Claria are registered trademarks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2009 Epson America, Inc. 6/09

CPD-27505

Cut out the card to the right and keep it with you when purchasing replacement ink cartridges.

Printed in XXXXXX

Printed in XXXXXX

Artisan® 710 Series Ink Cartridges

Color	Standard-capacity	High-capacity
Black	–	98
Cyan	99	98
Magenta	99	98
Yellow	99	98
Light Magenta	99	98
Light Cyan	99	98